


R0758

Acceleratore di espulsione a ghiera
Ejection accelerator with ferrule

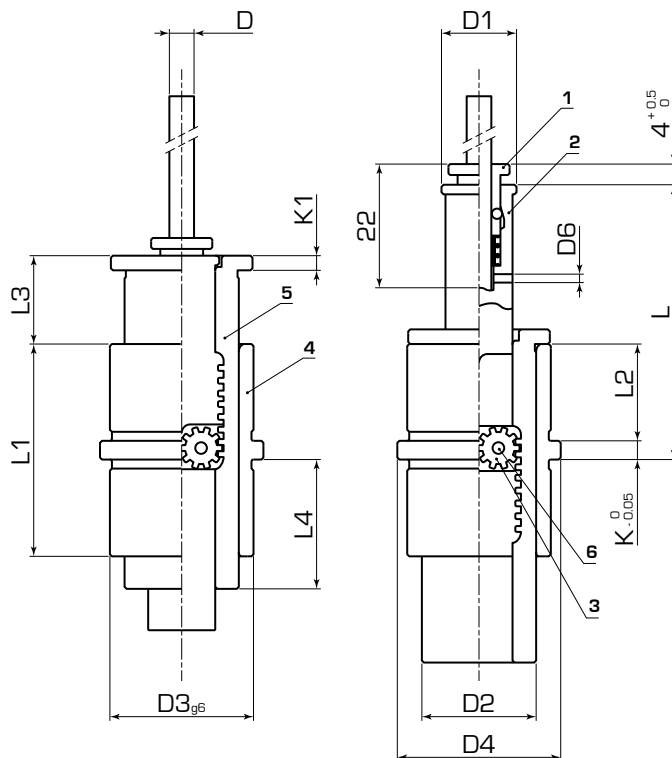

Descrizione:

Parti:

- 1 - Anello d'arresto
- 2 - Estrattore
- 3 - Pignone
- 4 - Bussola di scorrimento esterna
- 5 - Bussola di scorrimento interna
- 6 - Spina cilindrica

Description:

Parts:

- 1 - Retainer ring
- 2 - Ejector bolt
- 3 - Pinion
- 4 - Outer sliding bush
- 5 - Inner sliding bush
- 6 - Dowel pin

Codice Code	D	D1	D2	D4	D3	L	L2	L1	L3	L4	L5	F	D6	K	K1
R0758-08-0001	3	12.5	16	22	20	37	14	32	8	17	22	13	-	4	3
R0758-08-0002	4	12.5	16	22	20	37	14	32	8	17	22	13	-	4	3
R0758-08-0003	5	16	24	34	30	57	20	44	15	27	36	16	2	4	3
R0758-08-0004	6	16	24	34	30	57	20	44	15	27	36	16	2	4	3
R0758-08-0005	8	17	24	34	30	57	20	44	15	27	36	17	2	4	3
R0758-08-0006	10	21.5	30	40	36	78	28	62	20	34	46	21	2	6	4
R0758-08-0007	12	21.5	30	40	36	78	28	62	20	34	46	21	2	6	4

Caratteristiche:

Sostituzione rapida dell'espulsore, spazio richiesto minimo, risparmio dei costi.

Metodo di installazione:

La tasca rotonda D6 è necessaria per installare il perno di centraggio, il quale arresta la rotazione dell'espulsore. Tutti i fori di montaggio devono essere perpendicolari alla superficie di separazione.


Features:

Quick replacement of the ejection pin, minimum space required, cost savings.

Installation method:

D6 round pocket is needed to install the dowel pin which stops the turning of the ejector pin. All mounting holes should be perpendicular to the parting surface.

R0758 Acceleratore di espulsione a ghiera Ejection accelerator with ferrule

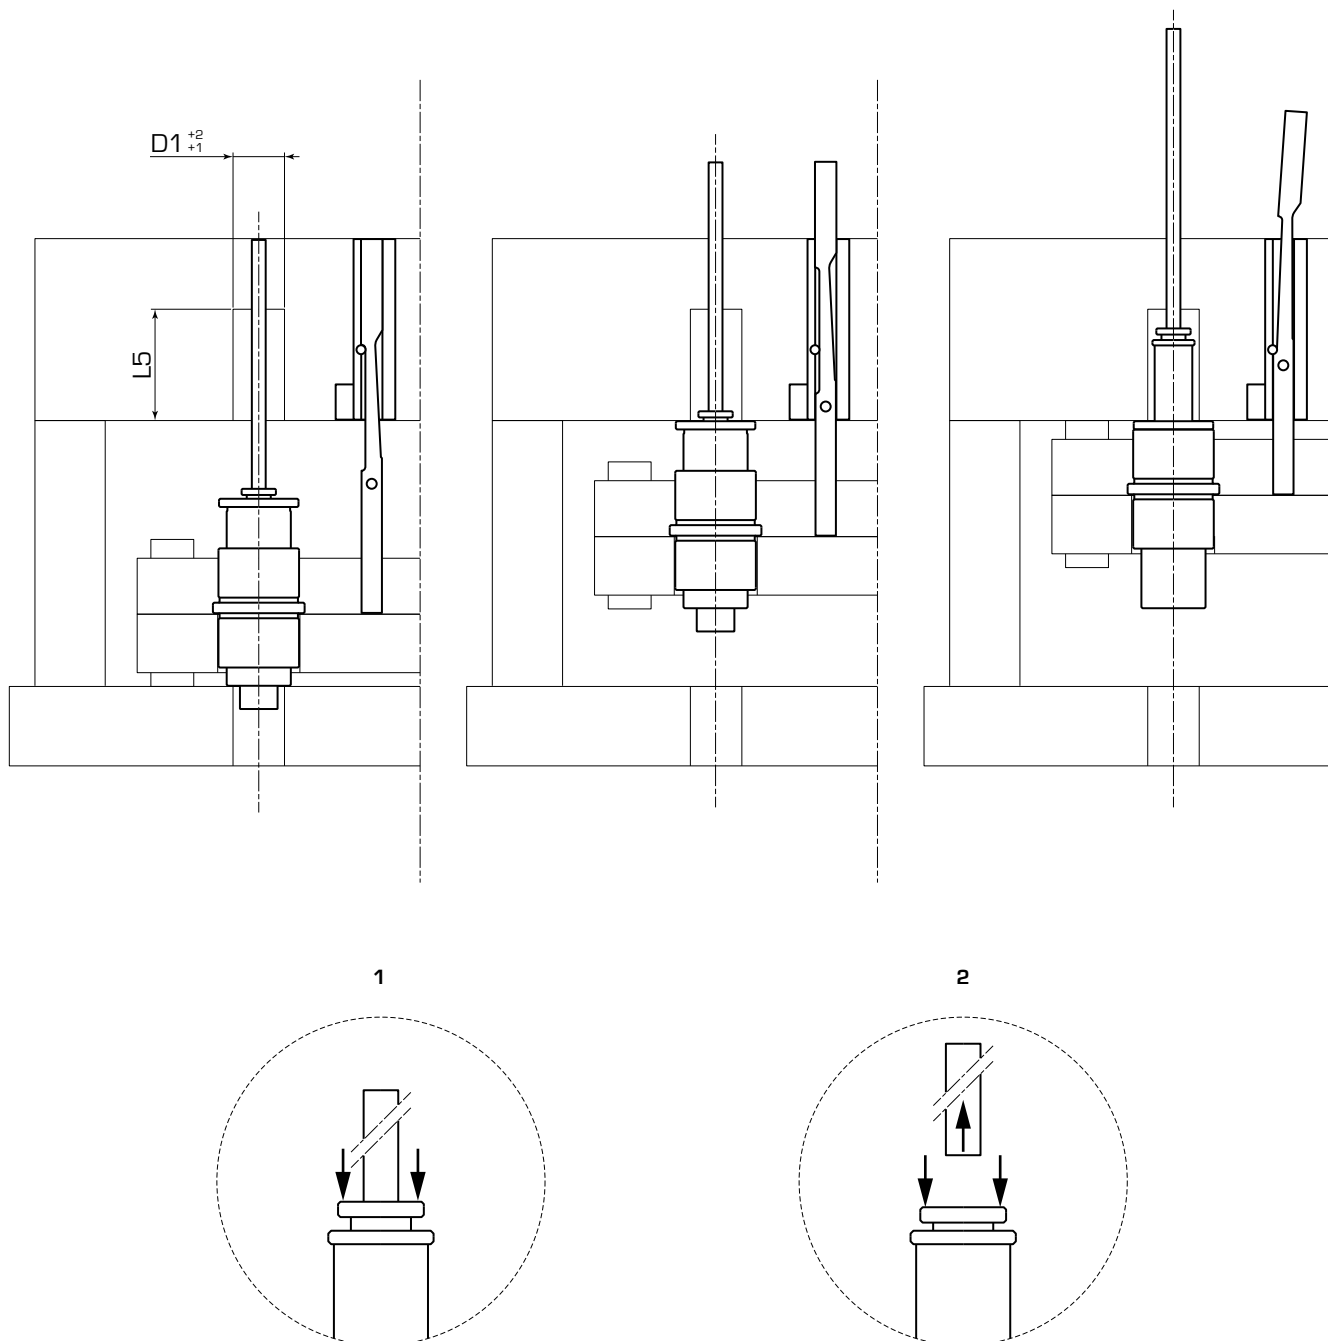

Istruzioni smontaggio espulsore:
1. spingere la bussola verso il basso
2. tirare l'espulsore

Ejector pin dismounting instruction:
1. press down the bush
2. pull the ejector